



LAYCOCK SYSTEMS, INC.

1601 North 43rd Street, Tampa, FL 33605

Ph: 813-248-3555 / Fax: 813-242-0514

Email: sales@laycocksystems.com / Web: www.laycocksystems.com

INSTRUCTIONS FOR 3-PHASE "LIGHTNING" WINDING HEAD

CROWN MODEL 2103

The Crown 3-phase Winding Head will easily and quickly produce precisely shaped mush coil which will readily fit into the stator slots of your motor.

The Winding Head consists of a rigid frame, equipped with 3 pairs of winding arms and fingers, each opposed set of arms moving together from the frame center with a uniform distance of travel, by means of a screw common to each pair, motivated by a crank mounted at the end of each screw. A scale attached to the cross arms indicates, in inches, the dimensions of the new coil desired.

Due to the close tolerances maintained on the adjusting screw and its assembly, there may be some stiffness of operation until the adjusting screw has been thoroughly worked in. Therefore, you will find attached to one of the support arms of this winding head, a large extension crank which will assist in turning the smaller adjusting cranks until the adjusting screw is completely worked in.

Six (6) identical coils may be wound in succession on this head. This set of coils can readily be removed from the winding head, simply by revolving the winding fingers one-half turn. After removing the coils, the winding fingers may be turned back one-half turn to a locked position.

This feature, together with the use of the six (6) guide finger set furnished, permits six (6) coils to be accurately wound to shape.

Correct tension is easily maintained by the use of the usual tension block and by the wire guide. The rigid frame of the winding head, along with the guide fingers, allows a minimum of wire tension to be used in the production of six (6) identically sized coils.

MAINTENANCE and STORAGE

When not in use, store unit within a plastic bag.

WARRANTY:

Crown's Motor Repair Equipment is warranted to the original owner against defects in materials and workmanship for ninety (90) days from date of purchase. Any part found to be defective (except by overloading, misuse, neglect, fire, accident, tampering with by unauthorized serviceman, or other cause beyond the manufacturer's control), will be replaced or repaired free of charge.

PARTS LIST
CROWN MODEL 2103

Item#	P/N	Description	Quantity
1	C808000	Baseplate	1
2	C808001	Main Support Arm	1
3	C808002	Cross Arm subassy., L/H	1
4	C808003	Cross Arm subassy., R/H	1
5	C808004	Main Finger Support Bracket,R/H thread	1
6	C808005	Finger Support Bracket, L/H thread	1
7	C808006	Main Feed Screw	2
8	C808007	Scale "A"	2
9	C808008	Drivescrew #00x1/8"	14
10	C808143	Scale "C"	1
11	C808010	Scale "B"	2
12	C808011	Screw, Rd Hd, #10-32x7/8"	6
13	C808012	Bracket	2
14	C808013	Capscrew, 5/16"-18x3/4"	6
15	C808014	Crank	4
16	C808015	Setscrew, 1/4"-20x1/4"	4
17	C807131	Washer SAE, 5/16"	4
18	C808017	Collar	8
19	C808018	Cross Arm Finger Support Bracket,R/H thread	2
20	C808019	Cross Arm Finger Support Bracket,L/H thread	2
21	C808020	End Bracket	4
22	C806030	Spring	6
23	C808021	Finger Spacer	6
24	N/A		
25	C808023	Setscrew 1/4"-20x3/8"	6
26	C808024	Base Support Tie Rod	2
27	C808025	Hex Nut, 5/16"-18	6
28	C808026	Capscrew, 5/16"-18x1-3/8"	1
29	C808027	Cross Feed Screw	2
30	C808028	Spacer Support Rod	6
31	C808029	Pin-Drive-Lock, 1/8"x1/2"	6
32	C808030	Lockwasher, 5/16"	7
33	C808031	Washer, wrought iron 3/16"	6
34	C808016	Extension Crank	1
35	C500050	Finger Assembly	6

**SPECIFICATIONS FOR 3-PHASE "LIGHTNING" WINDING HEAD
CROWN MODEL 2103**

Construction: Plated steel main arm and cross arms with aluminum finger spacers and brackets.

Purpose: Winds diamond shaped 3-phase coils. (For motors 1/4HP to 75HP).

Group winding up to six (6) coils.

(Diamond shaped coils tip to tip of 5" to 19-1/2", and widths of 2-1/4" to 11-1/2").


Specifications: Term "Lightning" Head is because of fast set up and coil removal.

Four (4) permanently attached cranks adjust the winding arms in pairs and the upright Fingers in pairs simultaneously. Finger Spacers rotate (lift and turn) on the uprights for ease of coil removal.

Easy to read scales (calibrated in 1/4" increments) for fast and accurate setups.

One (1) Extension Crank supplied.

Spare Parts: To be recommended on request.

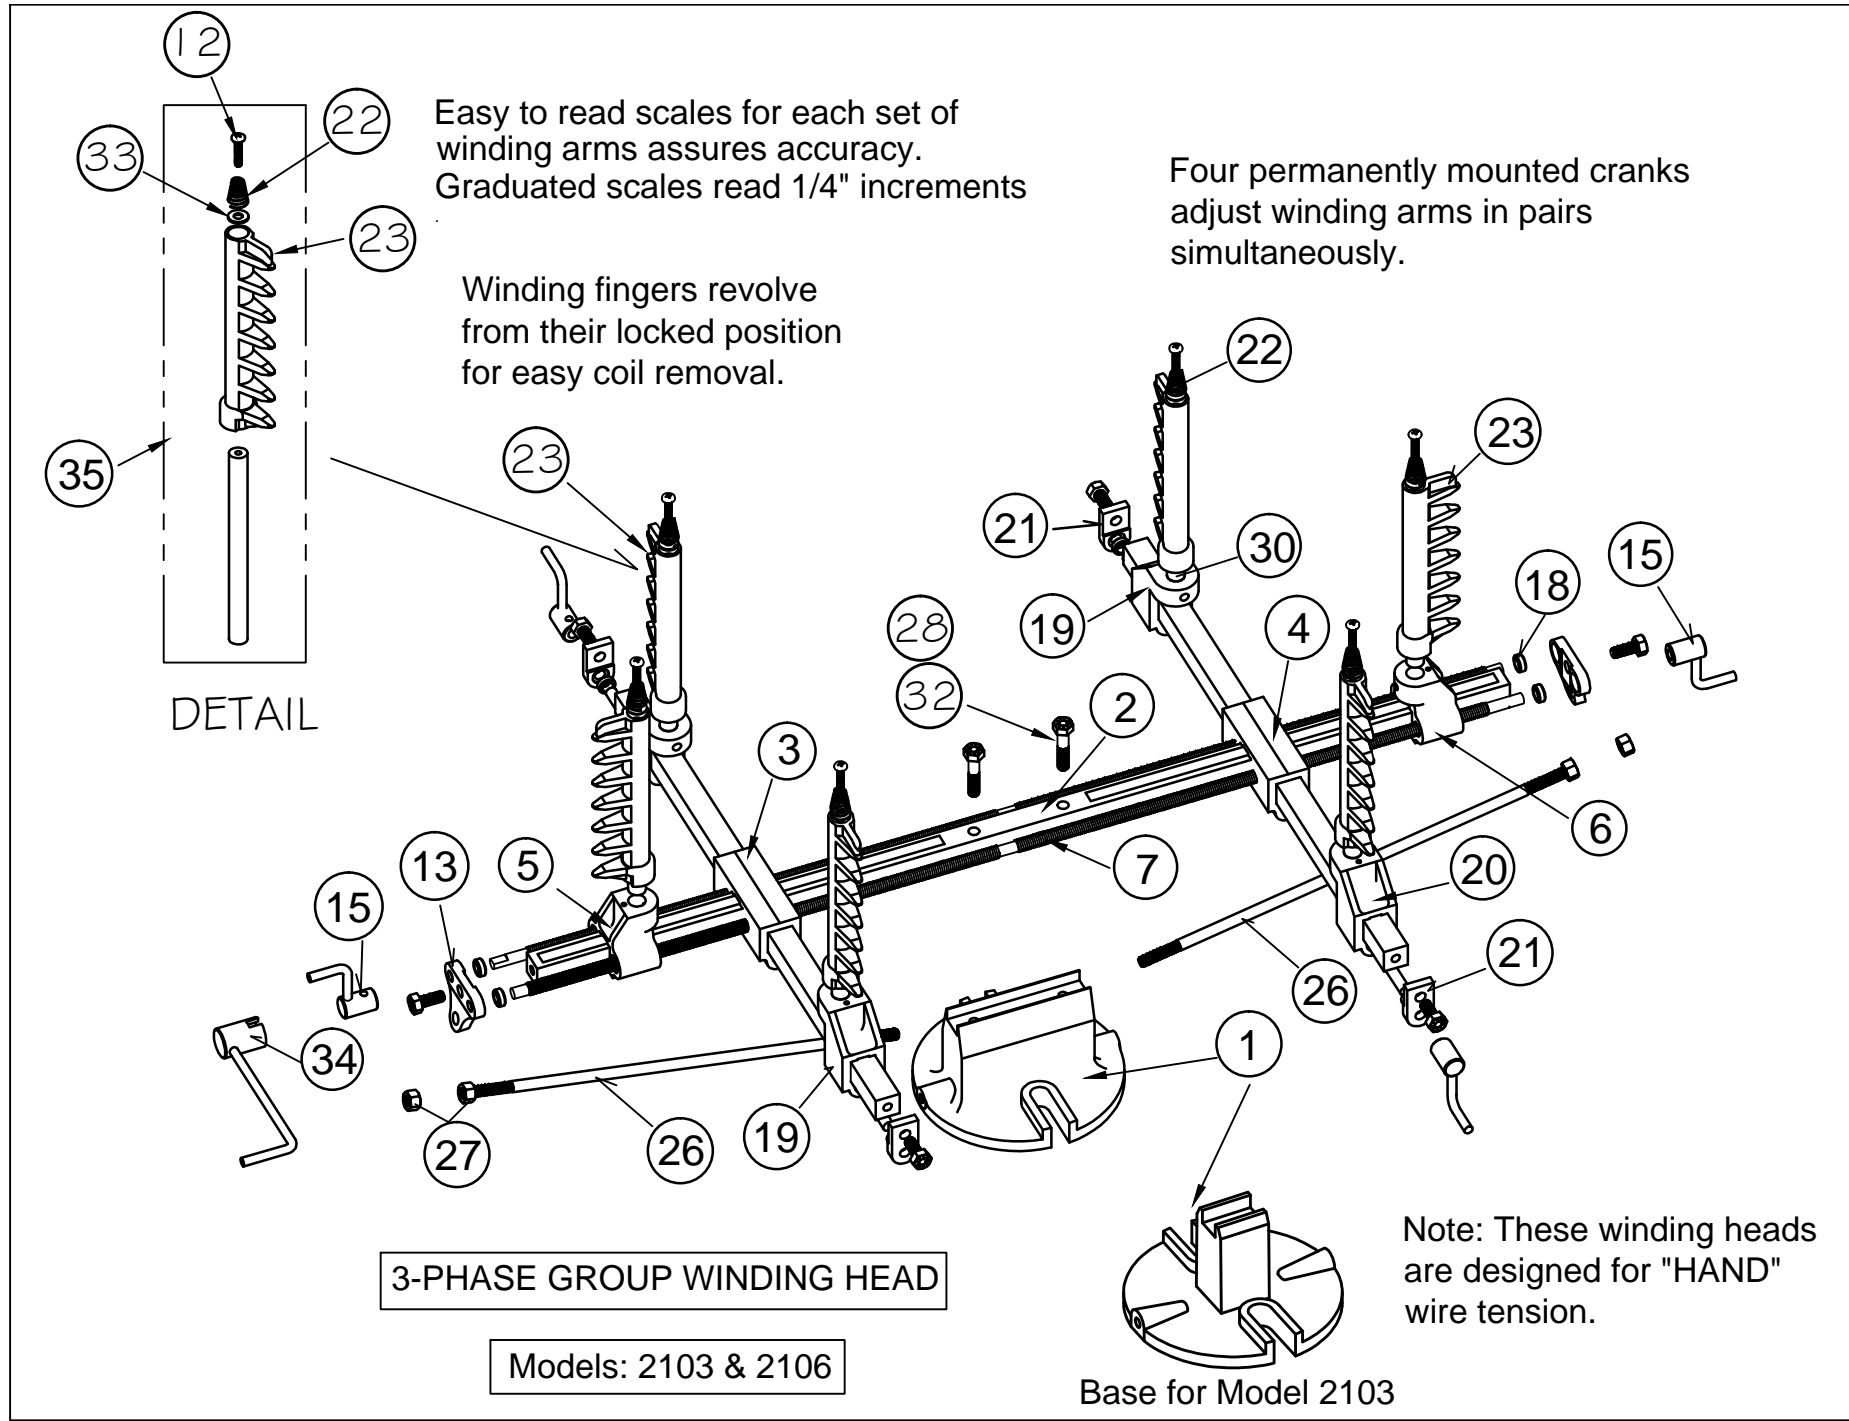

Easy to read scales for each set of winding arms assures accuracy. Graduated scales read 1/4" increments

Winding fingers revolve from their locked position for easy coil removal.

Four permanently mounted cranks adjust winding arms in pairs simultaneously.

DETAIL

3-PHASE GROUP WINDING HEAD

Models: 2103 & 2106

Base for Model 2103

Note: These winding heads are designed for "HAND" wire tension.